

**Boss cs-3 compressor mods...Courtesy of Indyguitarist.com and guitartone.net**

## Will help quiet the noise as much as possible.

Location	Stock value	Mod value	What it effects
C4	1uf elec	1 uf film	Quiets the noise
C14	1uf elec	1 uf film	
C17	1uf elec	1 uf film	
C6	1uf elec	1 uf film	Quiets the noise

Note from Brian:

For the ultimate quietness, change c4, c14, c17, and c6 1uf electrolytic caps in the pedal to 1uf metal film, or just regular 1uf film caps. This should help a bit, though the real problem is the ic chip in those pedals -- though they are rare, they can be loud, especially when placed after the distortion. You might try to place the compressor before your dirt pedals and after your dirt pedals, and see which way works best for your needs.

“Fat Body mod (formerly ross mod)” – will sound much fuller, warmer, and not so ‘splatty’!

Location	Stock value	Mod value	What it effects
R36		100 ohm	Adds richness and depth
C2	.022	.1 uf	Allows more bass to come through
C1 (under attack pot)	.027 uf	.22 uf	Adds MUCH fullness...a lot of bottom end richness
C13	.047 uf stock	2uf/2.2uf film for mod (two 1uf caps wired in parallel = 2uf)	Increases bass
R5	10k	470 ohm	Adds more ‘body’ to tone



**Links:**

<http://www.guitartone.net/> -- more diy mods

<http://www.guitartone.net/toner> -- ebook and audio download to show you how to set your effects, and how to get better guitartone

<http://www.brent-mason.com> -- brent mason interview and audio – 90 minutes, tons of pics

<http://www.howtoplayguitar.net/> -- jam tracks, guitar lessons, dvd's


**Email:**

[info@indyguitarist.com](mailto:info@indyguitarist.com) for more information

[info@guitartone.net](mailto:info@guitartone.net) to be notified of updates, and be registered to win a free mod (drawing happens about once every 4-6 weeks).



**R-36**

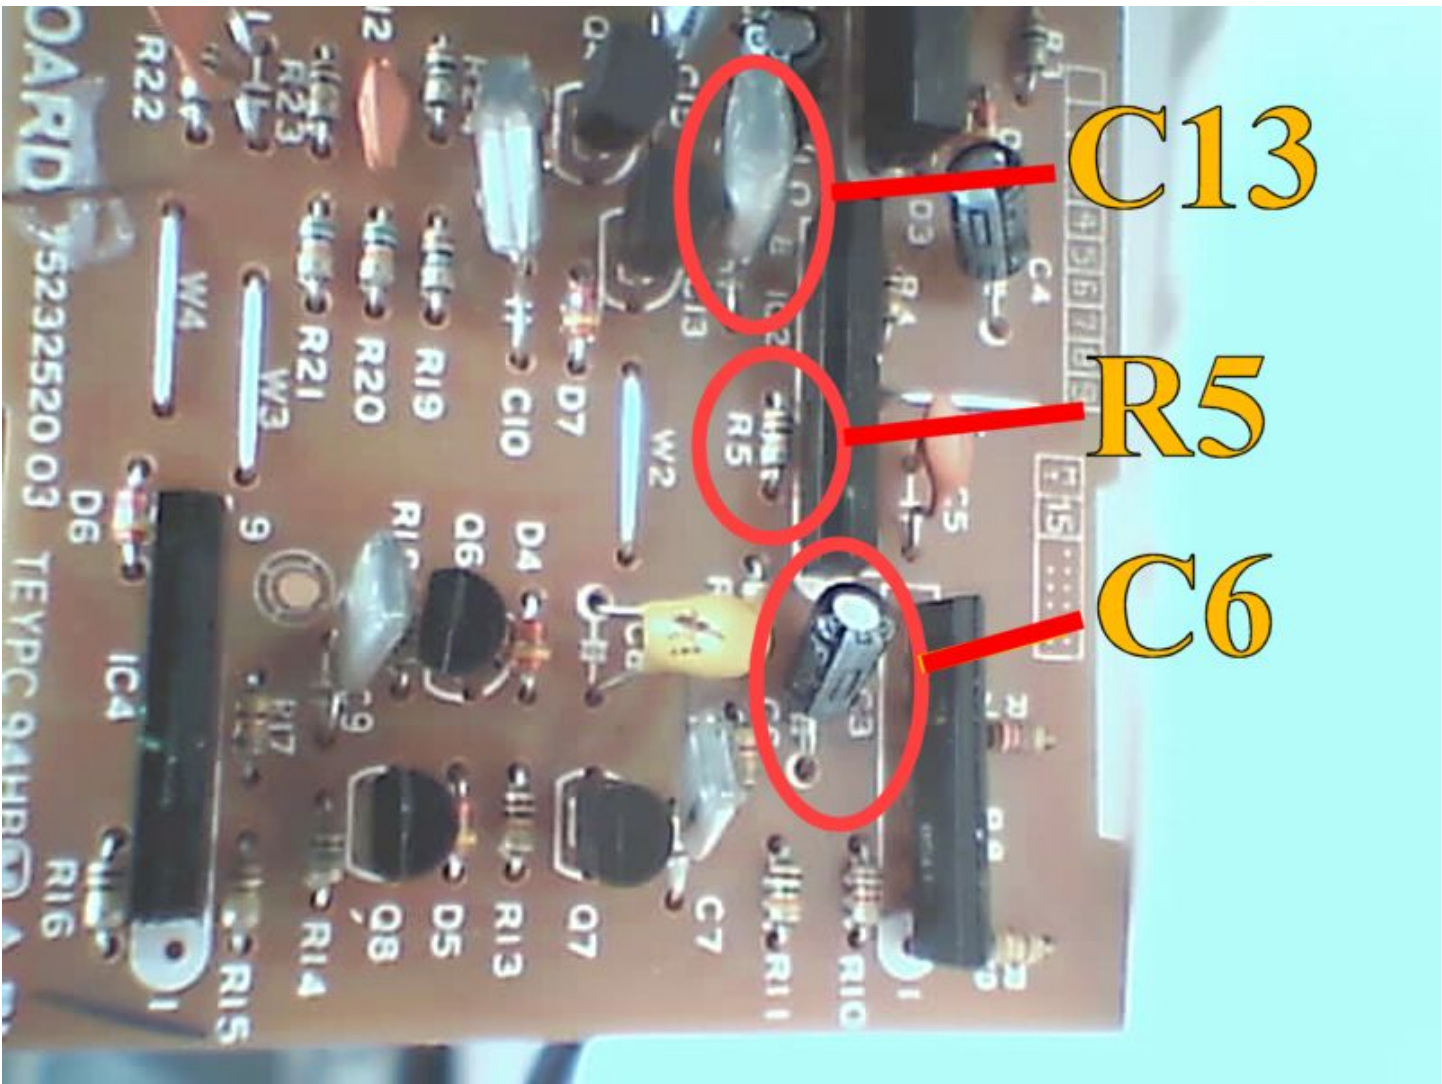

C13

R5

C6



